



DRYER FRONT PANEL AND DOOR PARTS

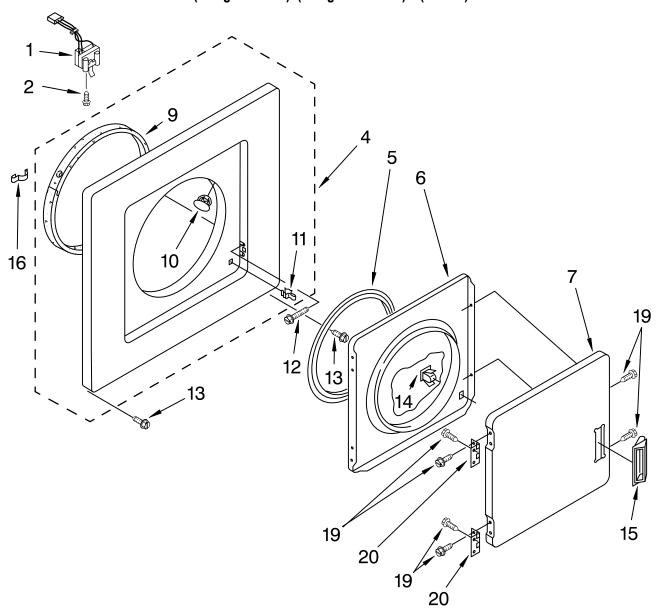

IIIus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3406108	Door Switch	9	349462	Bearing & Seal	14	3389441	Catch, Door
2	697773	Screw, 6-20 x 7/8	10		Clip, Felt	15		Handle, Door
4		Panel, Front			Pad (2)		686711	White
	692619	White	11	696144	Strike, Panel		689308	Almond
	692620	Almond	12		Screw, Door		3978592	Biscuit
	3978587	Biscuit			Switch	16	692846	Support Protector
5	3390734	Seal, Door			Mounting (2)	19	694091	Screw, Door
6	695656	Door, Rear	13	343641				Mount To
7		Door, Front			10-16 x 1/2 (2)			Hinge & Panel (10)
	348205	White			(Front Panel)	20	348023	Hinge & Pin,
	689314	Almond			To Side Panel)			Door (2)
	3978598	Biscuit			•			


DRYER CABINET AND MOTOR PARTS

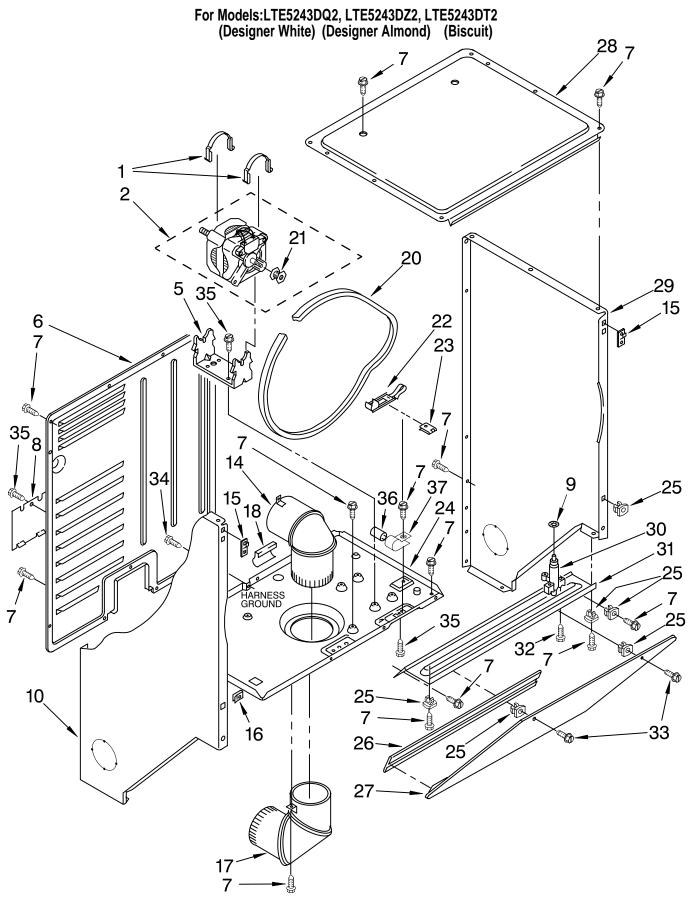

DRYER CABINET AND MOTOR PARTS

Part		Illus.	Part		Illus.	Part	
No.	DESCRIPTION	<u>No.</u>	No.	DESCRIPTION	<u>No.</u>	No.	DESCRIPTION
660658	•	18	686770		30 31	693145	Latch, Lid Closure, Control
		20	8066064	Belt, Drive			Area
	` ,	21	8066051	Pulley, Motor		692781	White
8066068				(60 Hz.)		692782	Almond
	(60 Hz.)	22	3394332			3978599	Biscuit
696541	Bracket, Motor			Assembly	32	354975	Screw & Washer (3)
		23	692771	,			(Lid Latch
		١					Mounting)
3394228					33	693304	Screw & Washer (2)
							(Transition Panel
90296	•	26	692926				To Closure)
		07			34	697776	•
		21	600000		0.5	0000001	(10–32 x 5/8)
							Screw, 10–16 x 3/8
					36	661606	
		20					Start (Automatic
3394083			092041	1 ' '	07	057000	Washer)
00004		29	3402287		31	357030	Clamp, Capacitor
33990U3	Elbow, Lower						
	8066068 696541 3390405 343641 3394228 90296 3402294 3978589 3399602 3394083 98234	No. DESCRIPTION 660658 Clamp, Motor Mounting (2) 343481 (Alt.) 685441 (Alt.) 8066068 Motor, Main Drive (60 Hz.)	No. DESCRIPTION No. 660658 Clamp, Motor Mounting (2) 343481 (Alt.) 20 685441 (Alt.) 20 685441 (Alt.) 8066068 Motor, Main Drive (60 Hz.) 22 696541 Bracket, Motor 3390405 Panel, Rear 23 343641 Screw, 10–16 x 1/2 3394228 Cover, Terminal Block 25 90296 Clip Panel, Side (L.H.) 24 3402293 White 3402293 White 3402294 Almond 3978589 Biscuit 3399602 Elbow, Upper 3394083 Clip, Front Panel (2) 98234 Clip, Ground 28	No. DESCRIPTION No. No. 660658 Clamp, Motor Mounting (2) 343481 (Alt.) 685441 (Alt.) 20 8066064 21 8066051 8066068 Motor, Main Drive (60 Hz.) 22 3394332 696541 Bracket, Motor 3390405 Panel, Rear 343641 Screw, 10–16 x 1/2 3394228 Cover, Terminal Block 90296 Clip Panel, Side (L.H.) 24 3399632 For Side (Block 902926 Panel, Side (L.H.) 3402293 White 3402294 Almond 3978589 Biscuit 3399602 Elbow, Upper 3394083 Clip, Front Panel (2) 98234 Clip, Ground 3399603 Elbow, Lower 28 692641 29 3402287 3402288	No. DESCRIPTION No. DESCRIPTION 660658 Clamp, Motor Mounting (2) 343481 (Alt.) 685441 (Alt.) 20 8066064 Belt, Drive (Footer) (Go Hz.) (Go Hz.) (Go Hz.) 8066068 Motor, Main Drive (60 Hz.) 22 3394332 Idler & Slide Assembly (Go Hz.) 696541 Bracket, Motor Assembly (Go Hz.) 23 692771 Nut, Idler Bracket To Base (Go Hz.) (Go Hz.) 3390405 Panel, Rear Panel, Rear (Go Hz.) (G	No. DESCRIPTION No. DESCRIPTION No. 660658 Clamp, Motor Mounting (2) 343481 (Alt.) 685441 (Alt.) 20 8066064 Belt, Drive (50 Hz.) 31 8066051 Pulley, Motor (60 Hz.) 8066068 Motor, Main Drive (60 Hz.) 22 3394332 Idler & Slide Assembly 32 3390405 Panel, Rear 343641 Screw, 10–16 x 1/2 3394228 Cover, Terminal Block 23 692771 Nut, Idler Bracket To Base 3394228 Cover, Terminal Block 24 3399632 Base, Dryer 33 Base, Dryer Gelack) 33 692400 Nut, Push–In Panel (Black) 25 692400 Nut, Push–In Panel (Black) 34 Panel, Transition Panel (Black) 34 Panel, Transition Panel (Black) 34 Panel, Transition Panel, Transition Panel (Black) 34 Panel, Transition Panel, Panel, Transition Panel,	No. DESCRIPTION No. DESCRIPTION No. No.

DRYER BULKHEAD PARTS

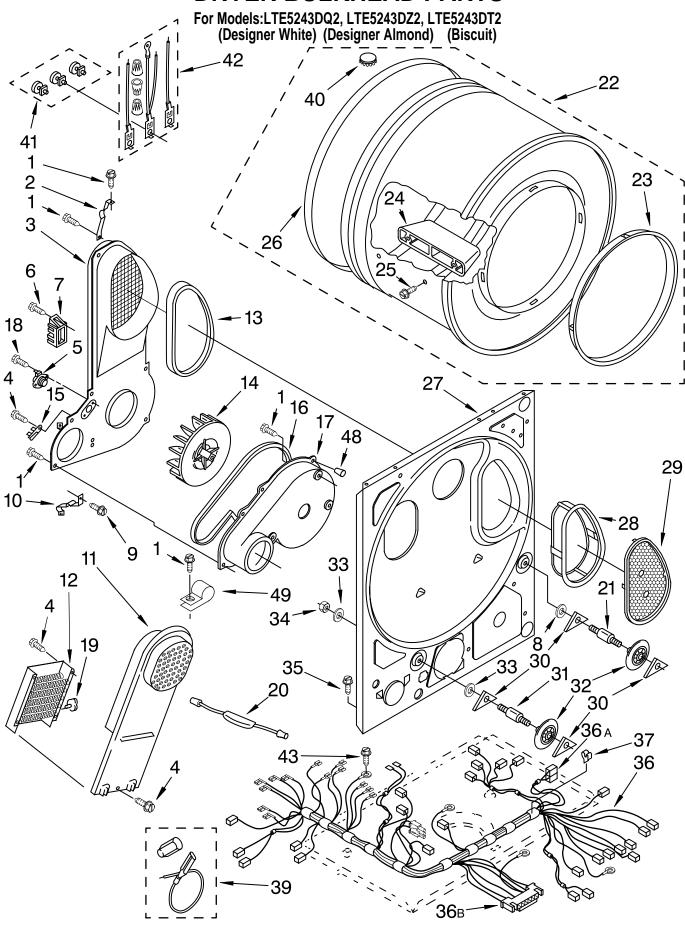

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


DRYER BULKHEAD PARTS

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Screw, 10-16 x 1/2	19	3404154	Thermostat,	36A	717252	Receptacle,
2	3395396	Clip, Air Duct			Heater Box			Terminal (2-Way)
_		To Bulkhead		0.4000=0	(200°F)			(Connects With
3	696547		20		Resistor Assembly			Door Switch
4	00707	Bracket	21	3399507		000		Harness)
4		Screw, 8–18 x 3/8		005040	Roller (R.H.)	36B	3395683	Receptacle,
5	3398128	Thermostat,	22		Drum, Dryer			Multi-Terminal
e	2202000	Internal Bias	23 24		Ring, Bearing			(Connects With
6	3393008	Screw, Terminal Block To	25		Baffle, Drum (3)	07	000444	Motor)(Dryer)
			25	91101	Screw, Baffle Mounting (6)	37	693141	
7	2207650	Bracket (2) Block, Terminal			(11–16 x 3/4)	39	279457	Harness (3)
8	3388703		26	345648	Seal, Drum Rear	39	2/945/	Wire Kit (For Heater Element
9		Screw, 8–18 x 5/8	27	695931	Bulkhead			Wiring Harness
10		Clip, Heater Box	28		Lint Screen			Repair)
10	0000101	To Bulkhead	29		Cover, Lint	40	3077358	Drum,Hole Plug
11	3401380	Heater Box	-	0002.0	Screen Outlet	41		Screw Kit
12		Element, Heater	30	690997	Tri–Ring (4)	71	270000	(For Terminal
13		Seal, Air Duct	31	3399506				Block)
		To Bulkhead			Roller (L.H.)	42	279318	
14	696426	Wheel, Blower	32	3397588	Roller, Support (2)			& Brass (3)
15		Fuse, Thermal	33	348197				(Includes Illus. 41)
16		Seal, Fan	34	3359452	Nut, 3/8–16 (2)	43	697776	
		Scroll	35		Screw, 10-16 x 3/8			(10-32 x 5/8)
17		Fan Scroll	36	3406941		48	359702	Cap, Screw
18	3390647	Screw, 8-18 x 1/2			Dryer Wiring	49		Clip, Strain
					(Includes Nos.36A,			Relief
					36B)			

DRYER SUPPORT AND WASHER PARTS


	Illus. No.	Part No.	DESCRIPTION
5 3 PRESURE SWITCH HOSE ROUTING	1 2	694304 692647	Cover, Channel Support, Dryer (L.H.)
11 8	3 4	343641 3400000	Screw, 10–16 x 1/2 Screw, 10–24 x 3/8 (8)
1 6A	_	000040	(Washer Cabinet To Dryer Supports)
2	5	692646	Support, Dryer (R.H.)
16	6	3954108	Harness, Lower (Automatic) (Includes Illus.
4	6A	696074	6A, 6B & 6C) Plug, Terminal (12–Way)
12 7 6	6B	62889	(Connects With Automatic Console Harness) Plug, Terminal
7 6B			(3–Way) (Connects With Automatic Lid Switch Harness)
17	6C	62505	Block, Disconnect (Connects With Automatic Washer Motor)
16	7	3347812	Clip, Wiring Harness (4)
	8	3405028	Clip
WASHER	9		Kit, Grounding
MOTOR	10 11		Wire, Ground Clip, Pressure Switch Hose (2)
	12	693141	Clip, Harness And Hose
	13		Strap, Ground
[14		Nut, Hex
15	15	3400036	Screw, 10–24 x 1
	16 17	3351614 8066080	Screw, 10–24 x 3/8 Hose, Pressure
10 13 9	17	8000000	Switch
14			

WASHER TOP AND LID PARTS

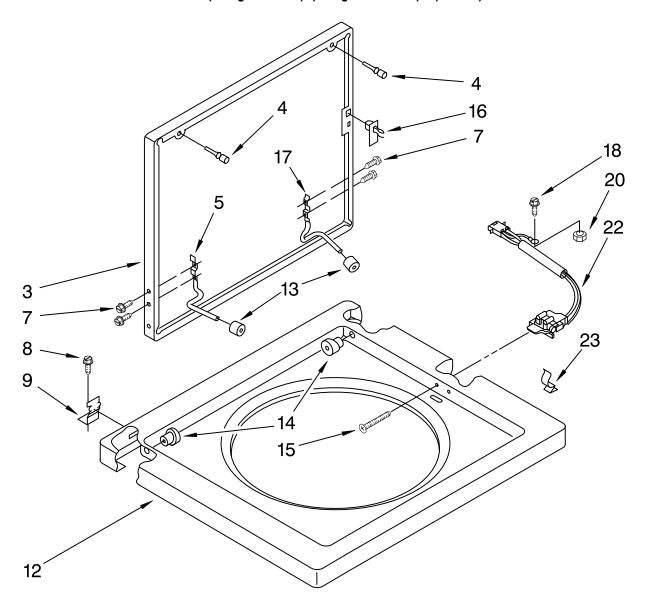

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
140.	NO.	DESCRIPTION	<u> 140.</u>	NO.	DESCRIPTION	_	NO.	DESCRIPTION
3		Lid	12		Тор	16	358684	Strike, Lid
	3398843	White		384693	White			Switch
	3398844	Almond		384694	Almond	17	384459	Hinge, Lid (R.H.)
	3398847	Biscuit		3978593	Biscuit	18		Screw, Ground
4	384475	Bumper, Lid (2)	13	19119	Bumper, Lid			(10-24 x 1/2)
5		Hinge, Lid (L.H.)			Hinge (2)	20	3400901	Nut, Ground
7		Screw, Lid	14	21258	Bearing, Lid			Screw (10-24)
		Hinge Mounting (4)			Hinge (2)	22	3355806	Switch, Lid
8	343641	Screw, 10-16 x 1/2	15	3356311	Screw & Washer,	23		Clip, Harness
9		Clip, Spring (2)			Lid Switch			Routing
		(Top To Cabinet)			Shield (2)			J


WASHER CABINET PARTS

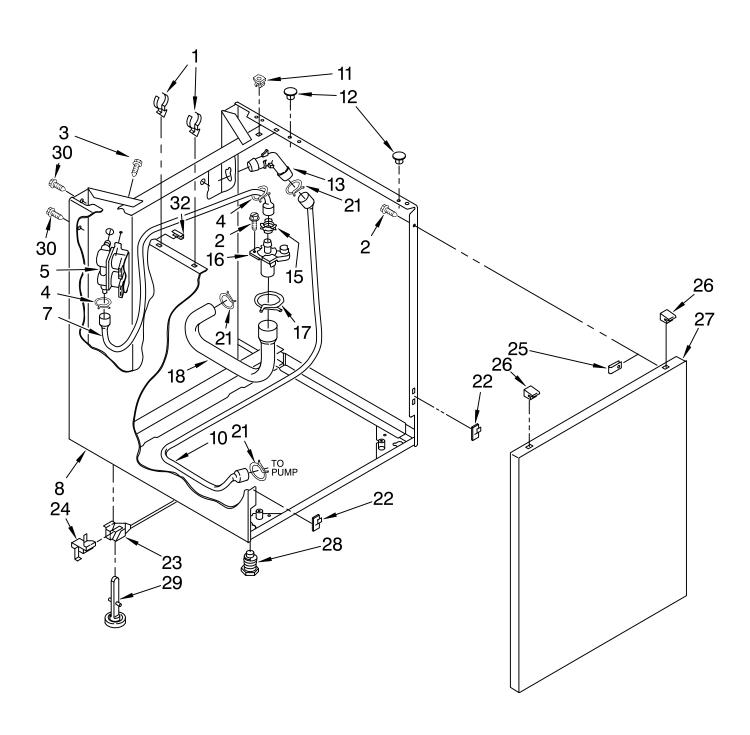


WASHER CABINET PARTS

Illus. No.	Part No.	DESCRIPTION
1	356746	Clip, Condenser
2	343641	Screw, 10-16 x 1/2
3	62863	Screw, Mixing
		Valve Mounting (2)
4	070454	(10–16 x 3/8)
4 5	370451	Clamp, Hose
5	3360389	Valve, Water Mixing
7	692699	Hose, Water Inlet
•	002000	(Siphon Break To
		Mixing Valve)
8		Cabinet
	696013	White
	696014	Almond
4.0	3978594	Biscuit
10	696710	Hose, Drain
11 12	692400 660975	Nut, Push-In (2) Plug, Top To
12	000973	Cabinet
		689587 (Alt.)
		694010 (Alt.)
13	356739	Connector, Hose
15	356471	Cap, Siphon Break
16	356363	Siphon Break
17	272861	Clamp, Hose
18	696394	Hose, Water Inlet
		(Siphon Break To Tub Ring)
21	660628	Clamp, Hose
22	3394083	Clip, Front Panel (2)
23	358652	Link, Leveling
24	359364	Clip, Leveling
		Mechanism (2)
25	98234	Clip, Ground
26	345670	Lock, Top (2)
27	600600	Panel, Front White
	692628 692629	Almond
	3978596	Biscuit
28	367594	Foot, Front (2)
29	358594	Foot, Rear (2)
30	3400000	Foot, Rear (2) Screw, 10–24 x 3/8
		(Washer Cabinet
		To Dryer Supports)
32	3390046	Protector,
		Edge


BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS

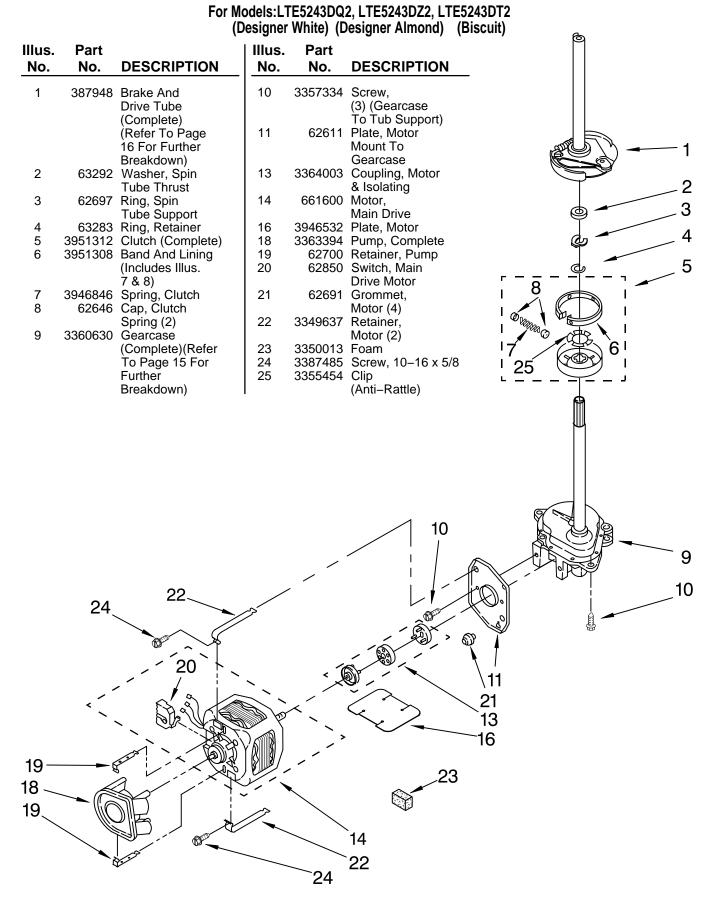

MACHINE BASE PARTS

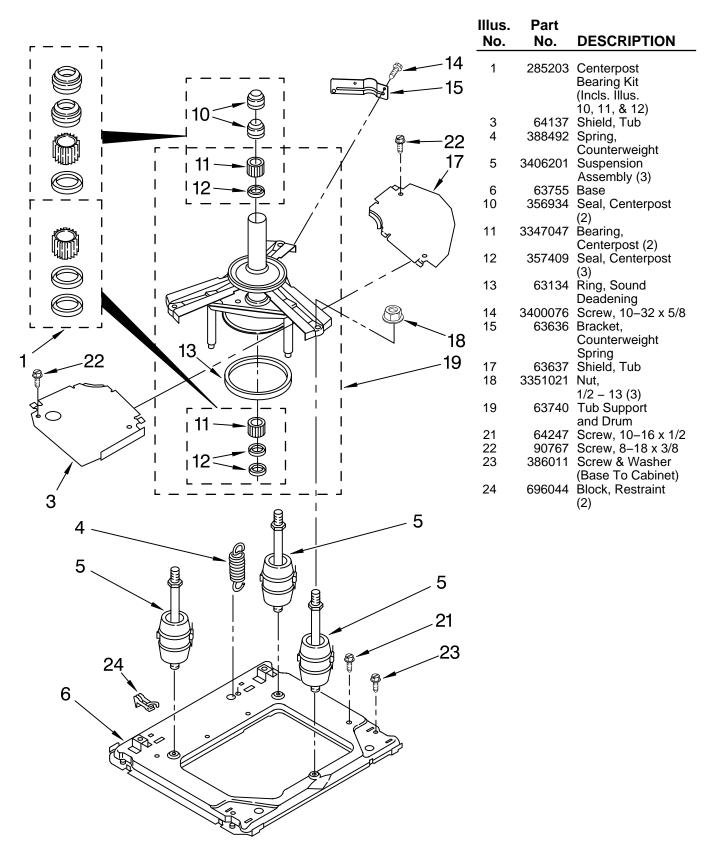


TUB AND BASKET PARTS

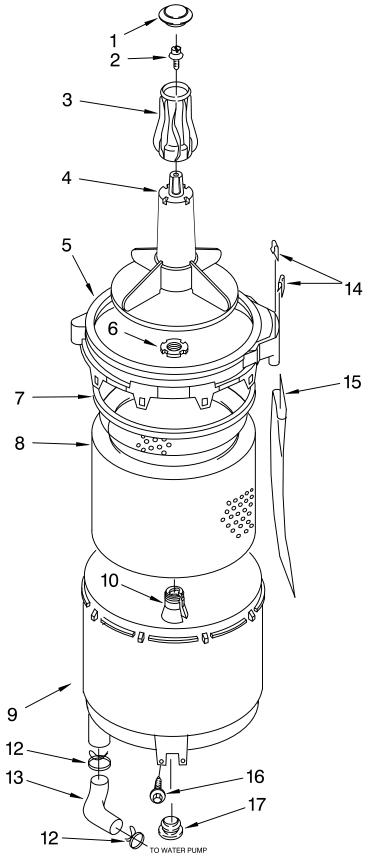


Illus. No.	Part No.	DESCRIPTION
1	3355758	Cap, Agitator
2	358237	Screw & Washer
2	63840	(5/16–24 x 1) Filter, Agitator
3 4	3349098	
5	64175	9
5	04175	
		Gasket (Includes Illus. 7, 14 & 15)
6	21266	
6 7	21366 3359587	
1	3359567	,
0	2254005	Tub Ring
8	3351985	
9	8066081	
10	389140	,
4.0		Basket Drive
12	371502	
13	386929	,
		To Pump
14	352155	Clip, Retaining
		(2)
15	356398	Tube,
		Drain Off
16	357640	Screw & Washer
		(Tub Mounting)
		(4)
17	383727	Gasket,
		Centerpost

WASHER WATER SYSTEM PARTS

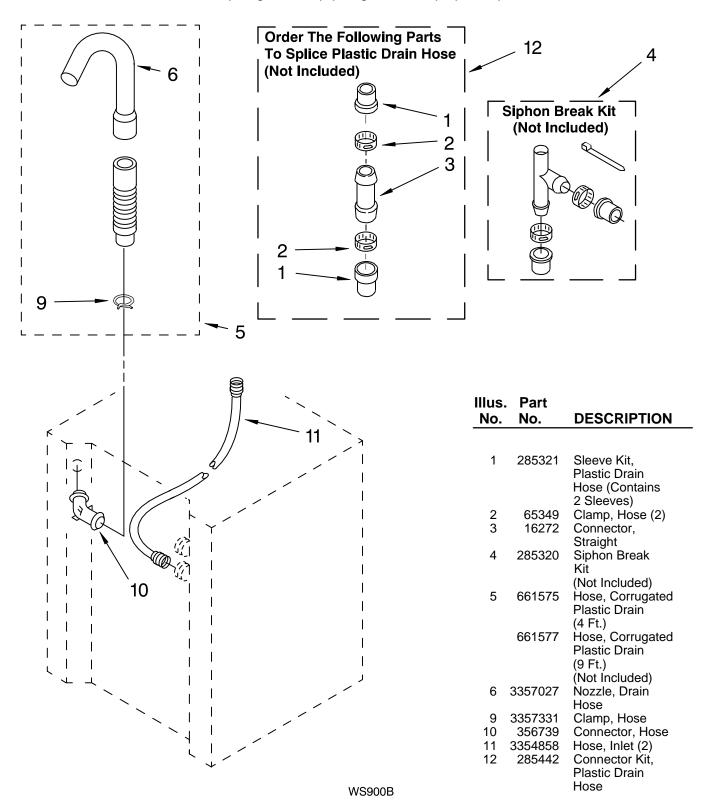


GEARCASE PARTS

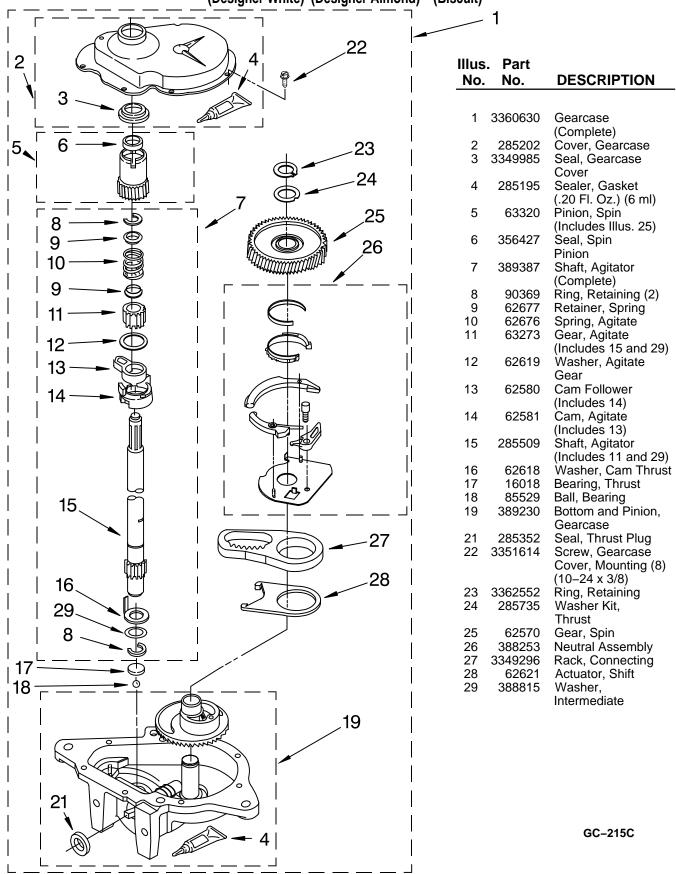

BRAKE AND DRIVE TUBE PARTS

For Models:LTE5243DQ2, LTE5243DZ2, LTE5243DT2 ___(Designer White) (Designer Almond) (Biscuit)

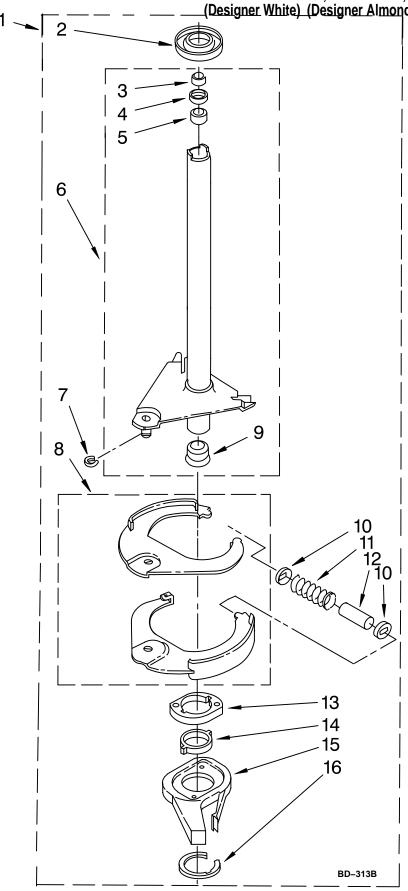

Illus. No.	Part No.	DESCRIPTION
1	387948	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
3	91939	Seal, Oil
2 3 4 5	356427	Seal, Drive Tube
5	356937	Spacer,
3	330337	Drive Tube
6	64027	Tube.
		Basket Drive
		(Includes Illus.
		3, 4, 5 & 9)
7	64035	Ring, Retaining
8 9	64232	Brake Shoe
9	62703	"T" Bearing,
		Spin Tube
10	62648	Cap, Brake
		Spring (2)
11	63748	Spring, Brake
12	62909	Sleeve, Brake
		Spring
13	661516	Cam, Brake
		Release
		63023 (Alt.)
	00000	3348288 (Alt.)
14	63022	Sleeve, Cam
15	64194	Driver, Brake
10	00000	Cam
16	90368	Ring, Retaining

BD-313B


SALES ACCESSORY PARTS

1	
2 3	

Illus. No.	Part No.	DESCRIPTION
1	279823	Side Exhaust Extension Kit
2	488729 3395536	

MISCELLANEOUS PARTS

For Models:LTE5243DQ2, LTE5243DZ2, LTE5243DT2 (Designer White) (Designer Almond) (Biscuit)

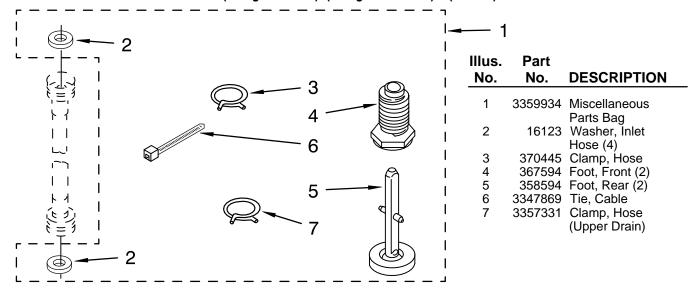

OPTIONAL PARTS (NOT INCLUDED)

Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION
PAINT, TOUCH-UP (1/2oz.)	PAINT, BULK (1 qt.)	LUBRICANT
72017 White 72107 Almond 4392899 Biscuit PAINT, PRESSURIZED SPRAY	799344 White (Uncut) 978883 Almond (Uncut) 4392900 Biscuit (Uncut)	285208 Lubricant (Use Only in Brake Shoe Assembly On Roller and Pin)
350941 Leveler (Thinner) 350938 Primer, Gray 350930 White 350956 Almond 4392901 Biscuit	350572 Oil, Gearcase (16 Oz.)	SEALER 285195 Sealer, Gasket (.20 Fl. Oz.) (6 ml)